


LightRider

Instructions for Rechargeable Helmet Light

Helmet Vertical Midline

Look at the back of your helmet. Then imagine a vertical line that runs up the back and divides your helmet into right and left halves. Call this the vertical midline, and use it as the starting point for your **LightRider** installation.

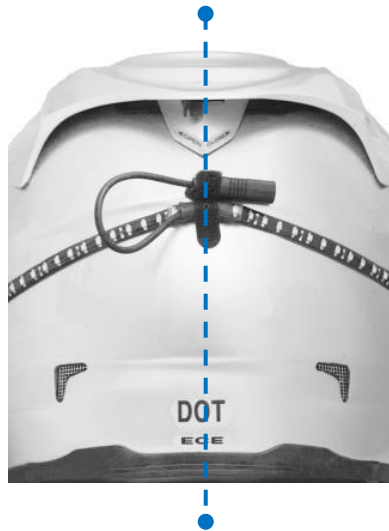

The LED band has three joints that allow you to flex the LED strips for installation. A roll of removable adhesive tape is included to help lay out a pattern before you attach the LED band to your helmet.

The adhesive on the back of the LED band creates a very high bond. However, if you remove and reattach the LED band many times, the adhesive can lose bonding strength.


Press lightly when you first attach the LED band to your helmet. If you have to reposition the band, pressing lightly will reduce the amount of adhesion lost. The adhesive reaches 90% of its bonding strength in just one hour. Full bond is reached in 24 hours.

Positioning the LED Band

1. Use the included helmet cleaning pad to remove dirt or grease from your helmet.
2. Unroll the strips of white alignment tape. This tape sticks with removable adhesive so that it can be repositioned.
3. Starting at the vertical midline, press the two short pieces of tape onto each side of your helmet.
 - The tape should not run across any sharp angles or around corners.
 - The tape should lay flat without any bulges.
 - Reposition the tape until you find the location you like best.
5. After you have positioned the two short sections of tape, finish laying out the pattern with the two long sections.

Attaching the LED Band

1. Starting at the middle of the LED band, remove the red liner from the two short sections of LEDs.
2. From the vertical midline, move along both sides of the helmet while aligning the bottom of the LED band with the top of the alignment tape.

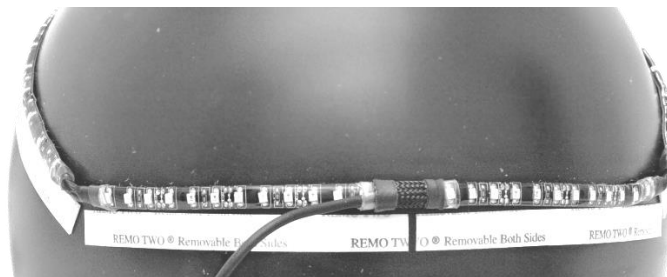


3. Remove the rest of the liner and finish pressing the LED band lightly against your helmet.



4. When you are satisfied that each side of your helmet looks like a mirror of the other, press firmly on the LED band all the way around your helmet. Then remove the alignment tape.


Attaching the Velcro Fastener

1. Remove the Velcro fastener from your installation package.
2. Align the circle in the Velcro with the center of the LED strip.
3. Press the Velcro around the sides of the LED strip and onto your helmet.

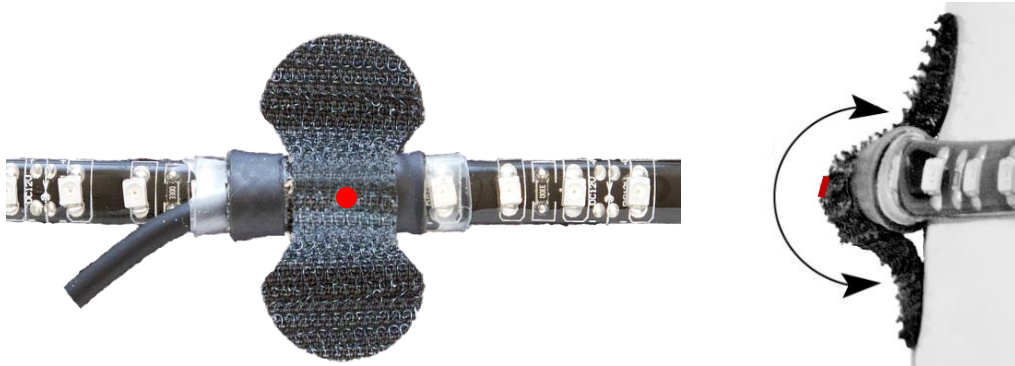

Connecting the Power Cord to the Battery

1. Connect the power cord end with the switch to the battery connector.
2. Install the power cord's other end into the connector on the LED band.
3. When not connected to the power cord, store the LED band connector against the helmet.

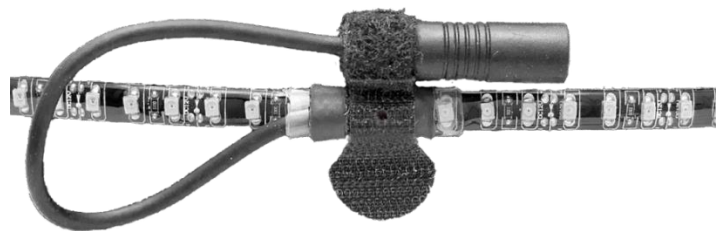

Using the Battery

1. The speed charger with your battery will complete a charge in approximately seven hours.
 - The charger's LED will turn from green to red while charging and back to green when charging is completed.
 - Learn more about li-ion battery charging at BatteryUniversity.com.
2. Always use the battery pack inside its protective fabric holster.

Note: Using the battery without its holster can cause cable damage not covered by the Lumenflex limited warranty.



Removing the LED Band

1. Remove the Velcro fastener from the back of your helmet.
2. Using a hair dryer with the temperature set to "warm", apply heat to a small section of LED band.
3. Warming the adhesive tape softens it so that you can pull the LED band together with the adhesive away from the helmet.



4. Continue applying heat and pulling the LED band away from the helmet until it is completely removed.
5. If any residue remains, clean it off with alcohol.

Lumenflex Limited Warranty

Lumenflex warrants our products against defects in material and workmanship for a Warranty Period of one (1) year from the date your purchase is shipped within the U.S. and Canada. In addition to our lighting products, the limited warranty covers our proprietary li-ion battery packs.

If a defect arises and a valid claim is received by Lumenflex within the Warranty Period, we will repair or replace the product at our discretion. We warrant any repaired or replaced products against defects in material and workmanship for the remainder of the Limited Warranty Period of the original product.

Lumenflex will arrange and cover return shipping costs within the U.S. and Canada for any product covered by the Limited Warranty. If repair or part replacement costs apply because the defect is not covered under the Limited Warranty, you will be notified prior to any service. The customer is responsible for all shipping costs of items not covered by the Limited Warranty.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

FOR ADDITIONAL LIMITATIONS ON LIABILITY, PLEASE SEE BELOW.

Exclusions and Limitations on Liability

We do not warrant our products against normal wear and tear, unauthorized modifications or alterations, improper use, improper maintenance, accident, misuse, negligence, damage, or if the product is used for a purpose for which it was not designed. Except for what is expressly stated in this Limited Warranty, we shall not be liable for direct, indirect, incidental, punitive, special, consequential, or other types of damages arising out of, or resulting from the use of the product, including but not limited to lost profits, increased business-related costs, loss of business opportunity or goodwill.

In addition, the Limited Warranty is immediately void if anyone other than Lumenflex makes any changes or alterations to the product.

Finally, all product liability shall terminate upon expiration of the Limited Warranty.

PLEASE NOTE: While some states do not allow the exclusion or limitation on certain kinds of damages or allow limitations on the duration of an implied warranty, Texas law shall apply with respect to all matters relating to Lumenflex's liability for its products, including but not limited to the scope and duration of the Limited Warranty and any limitation on liability or damages.

For a warranty issue, please email "support@lumenflex.com" or call +1 512-686-0965 (Mon to Fri, 8:30 AM to 6:00 PM CST).

Lumenflex Returns

Any Lumenflex LED light may be returned within 30 days of the product's delivery date under the following terms:

The product must be returned in new and unused condition, in its original packaging. All product returns are subject to inspection before refund.

If a product has been modified, damaged or is missing any of its original components, it will be returned to the customer at the customer's expense.

Custom designed lights are not returnable.

Shipping costs are non-refundable.

We recommend using a trackable shipping service to confirm delivery. We do not issue refunds on products which we do not receive.

Return Process

To return a light, visit "<https://www.lumenflex.com/returns/>".

Exchanging a Product

Our Exchange Policy applies to the LightRider motorcycle helmet light only. If you wish to change the color of the helmet light LEDs, we will exchange the LED portion of the product for a different color. Exchanges do not apply to any other Lumenflex products or accessories.

To exchange your LightRider, visit "<https://www.lumenflex.com/exchanges/>" for details.